

ELECTRISOUND

LIMITED

LDM Navigator Panel for the Lectrosonics DM Mixers
Custom Design for Sarah Heinz House by ElectriSound

Softkeys: The function of these keys change depending on the preset.


For presets 1-5 they are reserved to call up the first 5 presets. i.e. A calls up Preset 1, B - 2, etc. Note if the current program is 6-24 user must hit HOME first. Their functions are defined in the below table for all presets.

Current Preset: This displays the current preset in use **01** thru **24**

Note: When changing presets, allow the new preset number to appear (approx. 2 seconds) before attempting to perform any other function.

"X" and "Y" Volume: These volume controls change function depending on the preset.

Note: See the below table to determine the function of these for each preset. Please reduce these controls before changing the in use preset.

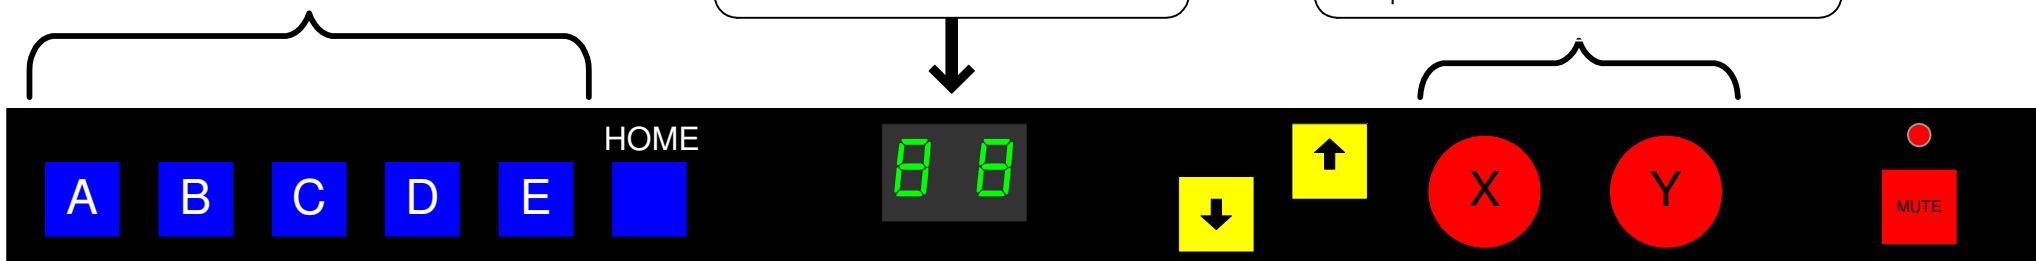

HOME

A B C D E

MUTE

00



HOME

Home: Recalls Preset 1

Because the Softkeys A-E can be utilised for functions other than preset recall when used in advanced programming (Presets 6-24) this key is reserved to **ALWAYS** recall preset 1, in ALL presets 1-24

Down/Up Preset:

These keys are reserved in each preset to increase (up arrow) or decrease (down arrow) the in use preset.

Mute: Mutes the program outputs, when engaged the LED in 'ON' (muted).

Note: This key can mute different outputs based on the preset. For a complete list see the table below.

NOTE: When changing presets use caution. Presets have differing volume levels, and use the controls "X" and "Y" differently. It is **STRONGLY recommended** that users **decrease the "X" and "Y" controls** fully counter-clockwise and **engage the "MUTE" control** before changing presets.